

A.Y. McDonald Mfg. Co. **Stainless Steel Submersible Pump Assembly Guide**

Assembly Guide for 650/800 GPM Pumps w/8" Motor

PUMP ASSEMBLY TOOLS

KIT	PICTURE	ITEM #	DESCRIPTION	KIT	PICTURE	ITEM #	DESCRIPTION
TORQUE WRENCH KIT		TRQWRN60-300NM	TORQUE WRENCH	JIG SET KIT		JIG8PEX8MOT	JIG 8" MOTOR
		INSTTRQWRNCH	INSERT FOR TORQUE WRENCH			LHEXALLEN6PEX6MOT	6" HEXAGONAL ALLEN TOOL
	125	FXSSTRAP8-10PE	FIXTURE FOR STRAP			LHEXALLENCOUP	HEAXAGONAL ALLEN TOOL COUP
CLEARANCE KIT		STRPSCT8-10PE	SOCKET FOR STRAP	ASSEMBLY KIT		WRN10PE650-800	WRENCH FOR IMPELLER NUT
	San	SHFTDPTCAL8-10PE	DEPTH CALIPER			TRQTSTNUT650-800	TORQUE TESTING NUT
		SHFTOPTHTOOL8-10PE	DEPTH TOOL				
FIXTURE SEAT KIT		FXS46810PE	FIXTURE SEAT				
		LHEXALLENFIXST	HEXAGONAL ALLEN TOOL FIXST				




WARNING: It is unlawful in CALIFORNIA & VERMONT (effective 1/1/2010); MARYLAND (effective 1/1/2012); LOUISIANA (effective 1/1/2013) and the UNITED STATES OF AMERICA (effective 1/4/2014) to use any product in the installation or repair of any public water system or any plumbing in a facility or system that provides water for human consumption if the wetted surface area of the product has a weighted average lead content greater than 0.25%. This prohibition does not extend to service saddles used in California, Louisiana or under USA Public Law 111-380. A WARNING: This product can expose you to chemicals including lead, which is known to the State of CALIFORNIA to cause cancer and birth defects or other reproductive harm. For more information go to: www.P65Warnings.ca.gov.



PUMP COMPONENTS

KIT	PICTURE	DESCRIPTION
STANDARD ASSEMBLY KIT		COUPLING WITH KEY
		DISCHARGE TOP VIEW
		TOP STAGE DIFFUSER TOP VIEW BOTTOM VIEW
		TOP STAGE IMPELLER
		INTERCONNECTOR
MIDDLE Stage Assembly		MIDDLE STAGE DIFFUSER TOP VIEW BOTTOM VIEW
KIT		MIDDLE STAGE IMPELLER

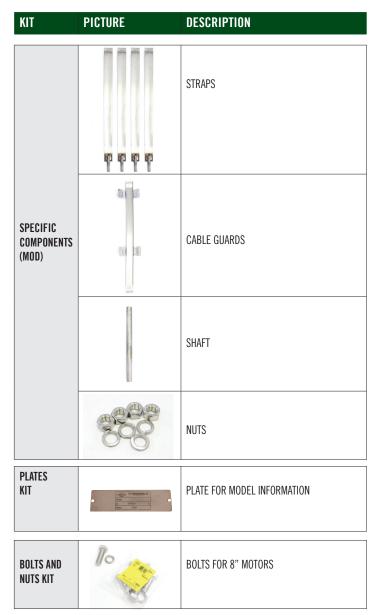



Fit KEY on SHAFT





2 Fit COUPLING on SHAFT and tighten using HEXAGONAL ALLEN TOOL COUP (clockwise)





Remove metallic filter grid from INTERCONNECTOR









4 Place INTERCONNECTOR on JIG; place screws and tighten securely









5 Fit SHAFT on INTERCONNECTOR and tighten using HEXAGONAL ALLEN TOOL (clockwise)







6 Set down FIXTURE SEAT and tighten using HEXAGONAL ALLEN TOOL FIXST (clockwise)







5B











7C

Use WRENCH FOR IMPELLER NUT to tighten (clockwise)





8B

Use TORQUE WRENCH WITH INSERT to tight at correct torque (clockwise)







10 Place MIDDLE STAGE DIFFUSER











11A













Repeat steps 11 and 12 for every MIDDLE **STAGE that you** need to add to the wet end of the pump

Stages below a torqued **IMPELLER** should not rotate.

Place: TOP STAGE IMPELLER





Use TORQUE TESTING NUT and WRENCH to tight at correct torque (clockwise) (Step 9) 14C

Add TOP STAGE DIFFUSER









Attach STRAPS to pump and fit at the bottom and at the top









Place NUTS on STRAPS and remove screws to loosen JIG















Use Depth Caliper to check shaft clearance





Use Depth Caliper to check shaft clearance







Add PLATE FOR MODEL INFORMATION





28A





SHAFT TOLERANCES (CHART 1)

AXIAL CLEARENCE - H(MM)

MOTOR DIAMETER	MEASURAMENT REFERENCE	DOWN	UP
4"		36.5	39.5-40
6"		71-71.5	75-77
8"	SHAFT/COUPLING	100	MIN 103
10" FRANKLIN		100	MIN 103
10" HITACHI		125.5	MIN 129

TORQUE FOR IMPELLER ASSEMBLY (CHART 2)

TORQUE

MODEL		STRAP (N.M)	IMPELI	ER (N.M)
90 GPM SERIES 6"		45	A.F.	
90 GPM SERIES	6" x 4"	35	45	
150 GPM SERIES	6"	45	80	
150 GPM SERIES	6" x 4"	35		
230 GPM SERIES	6"	45	00	
230 GPM SERIES	6" x 4"	35	80	
300 GPM SERIES 6"		45	80	
300 GPM SERIES	6" x 4"	35	60	
400 GPM SERIES		100	100	100
500 GPM SERIES		100	100	100
650 GPM SERIES		100	160	160
800 GPM SERIES		100	160	160
1100 GPM SERIES		100	250	250



